

JOTTO DESK ACCESSORIES

Specifications subject to change without notice



UNIVERSAL PHONE HOLDER

Model 5159

Gripmatic® Universal Cell Phone Holder grips all shapes of phones and has a quick release. Must be used with Sidesaddle



PDA HOLDER

Model 1308

Conveniently mounts your Palm Pilot™ or other PDA system to the Desktop. Must be used with Sidesaddle.



USB LIGHT

Model 2490

12" flexible wand with red filtered light and rheostat to adjust brightness. Three foot power cord plugs into cigarette lighter.



TELESCOPING RODS

8" Rod Model 1487
10" Rod Model 1136
12" Rod Model 1270



PIVOTING SIDESADDLE

Model 5225

Used to secure phone or palm holder to right side of desktop. The Pivoting Sidesaddle pivots independent of desktop angle.



STATIONARY SIDESADDLE

Model 5224

Used to secure phone or palm holder to right side of desktop.



BRACE KIT

Model 5238

The Brace Kit attaches to the stand providing additional support. It can be adjusted in length and mounts on flat, vertical or angled surfaces.



CABLE-DOCK® UPGRADE KIT

Model 5237

Firmly secures computer to the desktop with a series of cables and latches.



SCREEN SUPPORT

Model 5999

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the desk and adjusts in height and tilt.



OTR TRUCK
Qualcomm® OmniTRACS®/OmniVision™
Display Mount - No Holes
Air Ride Equipped Seat
Model No. 425-5151



PLEASE CHECK ALL BOX FLAPS AND INSERTS FOR PARTS STORED UNDERNEATH BEFORE DISCARDING BOX. THANK YOU.

WARNING: Do not install or use this product in any manner which would interfere with any of the vehicles controls, air bags or safety devices. Follow vehicle owner's manual instructions should a dash warning light come on after installation of this desk. Do not install or use this product in any manner which causes a safety hazard for vehicle and/ or occupants. To avoid serious injury do not place this desk or any objects between the air bags and yourself or any passengers. If necessary remove the desk before driving. Store in trunk or other safe place.

We recommend that you do not work on the Jotto Desk while driving! Park safely, then use. Remember, driving safely comes first.

WARNING: Make sure of and check on a regular basis that all knobs, fastening devices and handles are tight and secure. Repair or replace any faulty or worn parts. All equipment, such as computers, printers, phones, etc. must be safely secured when vehicle is in motion.

DISCLAIMER: The manufacturer of this product may not be held liable for any accidents, injuries or problems caused by the use or installation of this product.

Specifications subject to change without notice.

QUALCOMM® is a registered trademark of QUALCOMM Incorporated.
Jotto Desk® is a patented product and registered trademark of Assembled Products® Corporation.
425-5151 040808

jottodesk.com
toll free 1.877.455.6886

JOTTO DESK®

WWW.JOTTODESK.COM

Thank You

for purchasing one of our many truly unique and space saving products. We hope you will enjoy the convenience of our Jotto Desk® product for years to come.

These simple instructions will help pave the way for an enjoyable experience with your Jotto Desk® product...

1 Your order may be packed in more than one carton. Please check the quantity of the items that you ordered against the packing list attached to the outside of the carton.

2 Read all information contained on this sheet and the installation instructions before you begin to install your Jotto Desk product.

3 Follow installation instructions carefully. Please call Jotto Desk customer service if you need assistance.

Packing List ... The packing list shows the quantity that is packed within the carton. Occasionally an item may be on back order. This is indicated by a B/O in the Quantity Shipped column. If more than one of the same item is on back order, the amount back ordered will be listed after the B/O. Back orders will be shipped ASAP. Please call for expected ship date.

Damaged Merchandise ... If one of your products arrives damaged, or does not perform correctly within 30 days of purchase, Jotto Desk will refund or replace the product. If any component is defective in materials or workmanship, return it to Jotto Desk, freight prepaid, along with a copy of the original sales receipt and we will replace the part with identical or similar part. This warranty does not cover accidental damage or abuse.

Discrepancies ... Any discrepancies in this order are to be reported to your Customer Care Representative within 30 days of the order ship date.


Technical / Installation ... Please contact our Jotto Customer Service Team at 1.877.455.6886

INSTALLATION PROCEDURE

READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION



- 1 - Remove all four seat bolts, passenger or driver seat which ever you prefer. Place base in desired location using two of the seat bolts and place the two spacers under the two unused seat bolts.
- 2 - Place vertical tube/rod assembly on base post. Use clover knob to tightly secure vertical tube to post.
- 3 - Place articulated swing arm over the 5/8" end of the telescoping rod. Tighten with ratchet handle. Ratchets insert at large opening in arm.
- 4 - Attach Qualcomm® plastic holster to mount plate using 4 screws and nuts.
- 5 - Attach mount plate to end of articulated swing arm and secure by tightening ratchet handle.

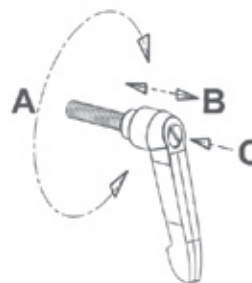

RATCHET CLAMP OPERATION

NOTE: Ratchet handles are spring loaded and can be readjusted to tighten.

To adjust, pull handle out (B) and rotate counter clockwise (A), release and tighten. If needed, use standard screwdriver in slot for adjustment (C)

NOTE: Insert the ratchet handle through the unthreaded side of the articulated swing arm and tighten.



1 No Holes Base
425-3191



Vertical Tube Assembly
1 Tube &
Telescoping Rod
425-5461



1 Qualcomm®
OmniTRACS®/OmniVision™
Display Mount Plate
425-5570



1 Articulated
Swing Arm
425-1188



2 Spacers



1 Clover Knob
425-3136



2 Ratchet
Handles
425-1273